

NIR2GO



The NIR2GO is supplied
With a White Tile, Sample Lid and a sample holder that is clipped to the top of the
instrument.
Please confirm you have all these parts, if not contact Branscan to purchase a replacement

NIR2GO Taking White Reference method



1.) To White Reference (when required)
Remove the sample holder From the top of the NIR2GO



2.) Prepare Reference
Remove the cap from the White Reference and make sure the surface is clean and free from any contamination

4.) Take white Reference
Once the tile is loaded click on the "Reference" Button on the software. **DO NOT REMOVE IT UNTIL** the "Take Measurement" button is enabled



3.) Load white Reference
Make sure the glass of the NIR is free from any contamination, then place the White tile onto the top of the system **WHITE FACE DOWN**



You are now ready to scan Wheat

NIR2GO Wheat Sampling method




1.) Preparing the Sample
Use the sample Lid as a measuring device to select the sample you want to measure



2.) Prepare Sample
Making sure the sample holder is on the NIR2GO, load wheat into it as shown

4.) Scan the Sample
Once ready click on "Take Measurement" and in a few seconds the results will be displayed at the bottom of the screen

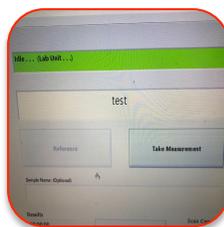

3.) Cover the sample
Once the sample is loaded, place the cover over the top of the sample to protect it from any ambient light



REPEAT THIS 3 TIMES (RELOADING SAMPLE) TO THEN CALCULATE AN AVERAGE VALUE